


# Garden Table



## SHOPPING LIST


- 8 – Culpeper 1x4 @ 8 feet long
- 2 – Culpeper 1x4 @ 10 feet long
- 4 – Culpeper 2x4 @ 8 feet long
- 2½" and 2" exterior self-tapping screws
- Wood glue

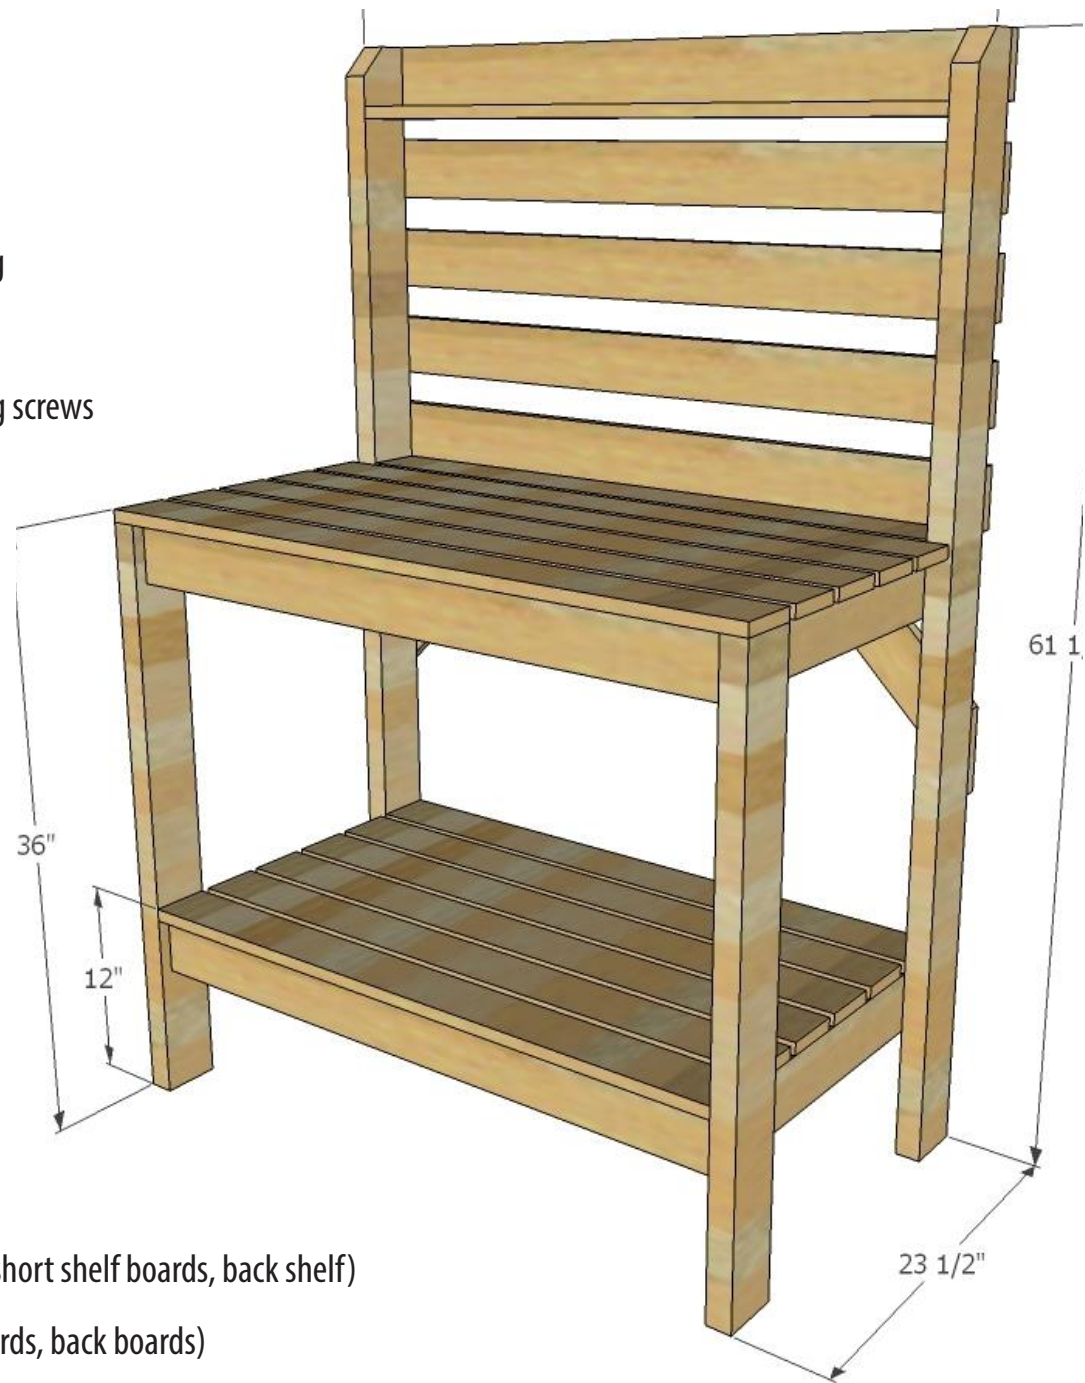

## CUT LIST

- 2 – 2x4 @ 61 ½" (back legs)
- 2 – 2x4 @ 35 ¼" (front legs)
- 4 – 2x4 @ 22" (side aprons)
- 10 – 1x4 @ 39" (front aprons, short shelf boards, back shelf)
- 10 – 1x4 @ 42" (long shelf boards, back boards)
- 2 – 1x4 @ 24" both ends cut at 45 degrees, long point to short point measurement (cross support)

# STEP 1

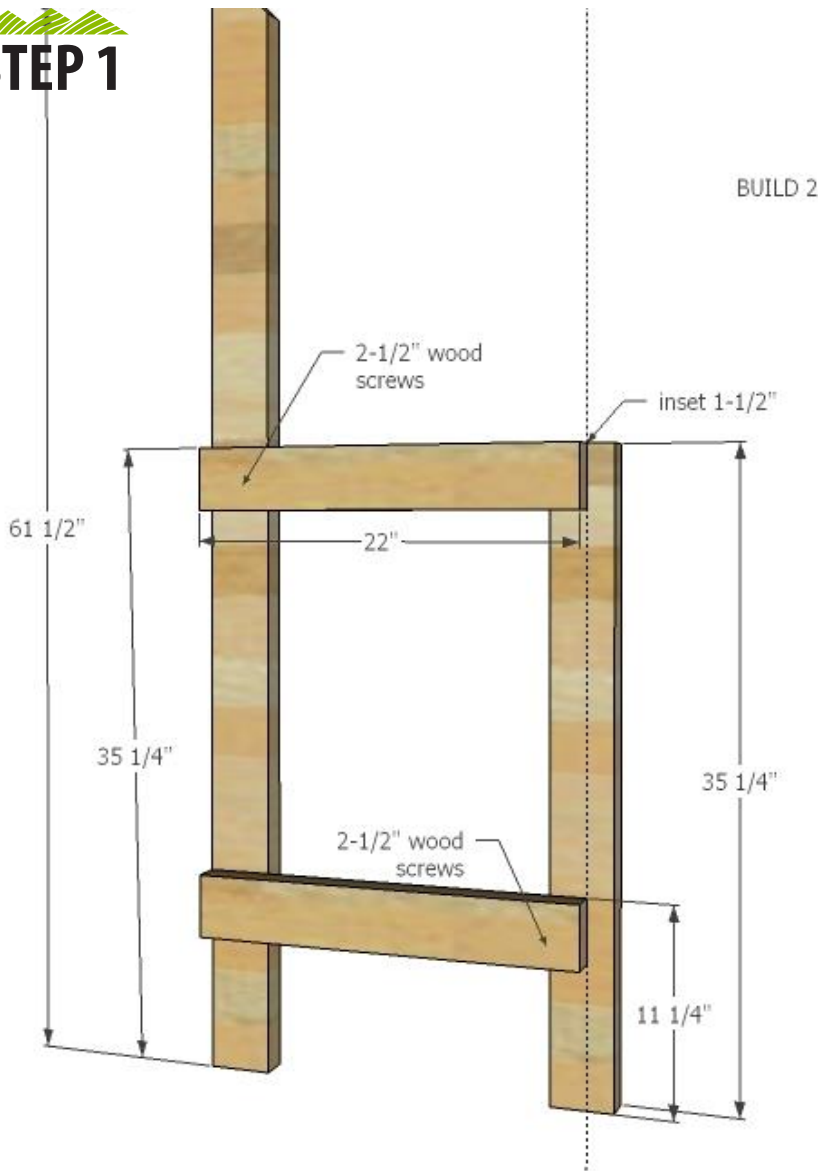

Mark the back legs from the bottom at  $11 \frac{1}{4}$ " and  $35 \frac{1}{4}$ ".


Attach with  $2 \frac{1}{2}$ " self-tapping exterior wood screws the 22" long side aprons to the back legs, matching marks with tops of aprons.

Then mark the front legs  $1 \frac{1}{2}$ " in from front edge and  $11 \frac{1}{4}$ " up from bottom of leg.

Attach other side of 22" long side aprons to the front legs.

# STEP 2

Attach front aprons to the side aprons with 2" wood screws and glue.


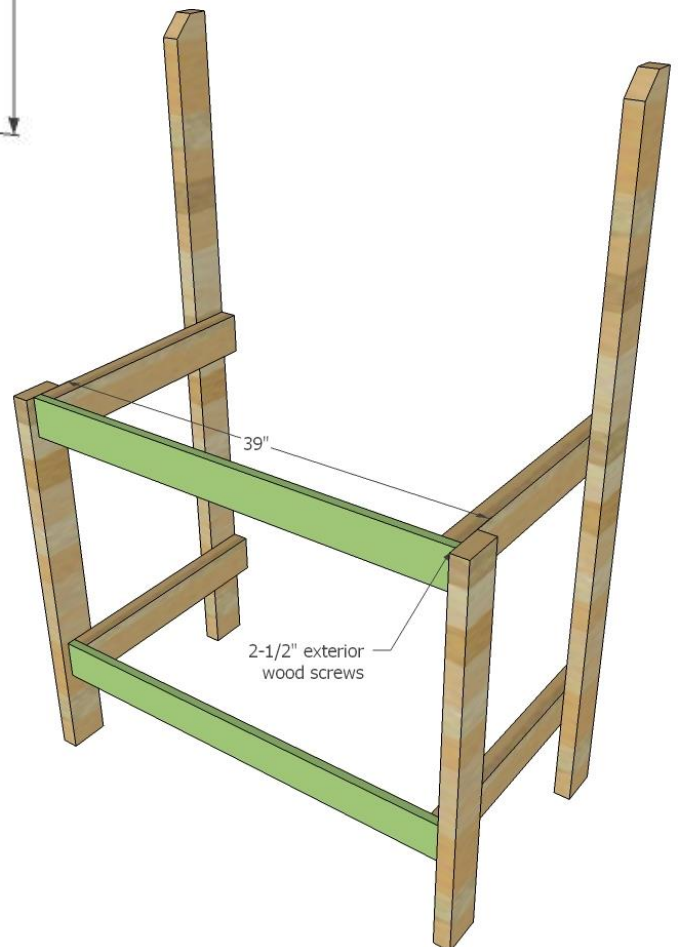


### STEP 3

Shelving – Place shelving boards on bottom shelf.

Attach with about a 1/2" gap in between shelf boards with 2" exterior wood screws.

Repeat for top shelf.

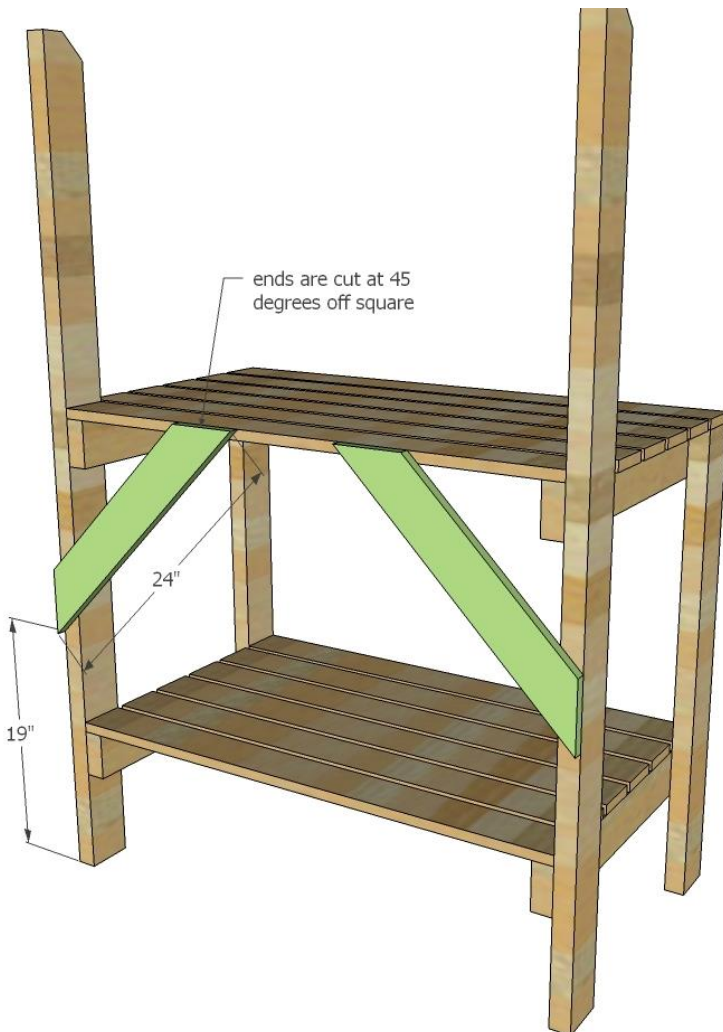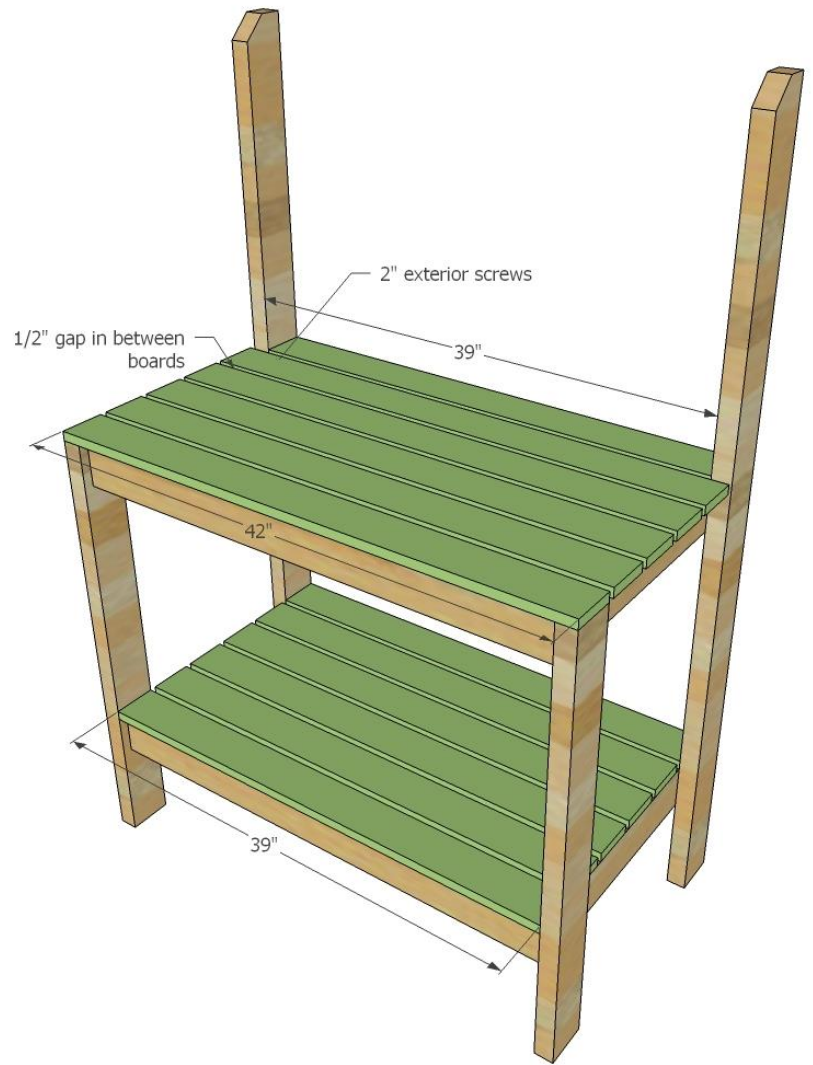


### STEP 4

Cross bracing – cut cross bracing at 45-degree angles on ends.

Attach to back legs and the back-shelf board with 2" exterior wood screws and glue.



## STEP 5

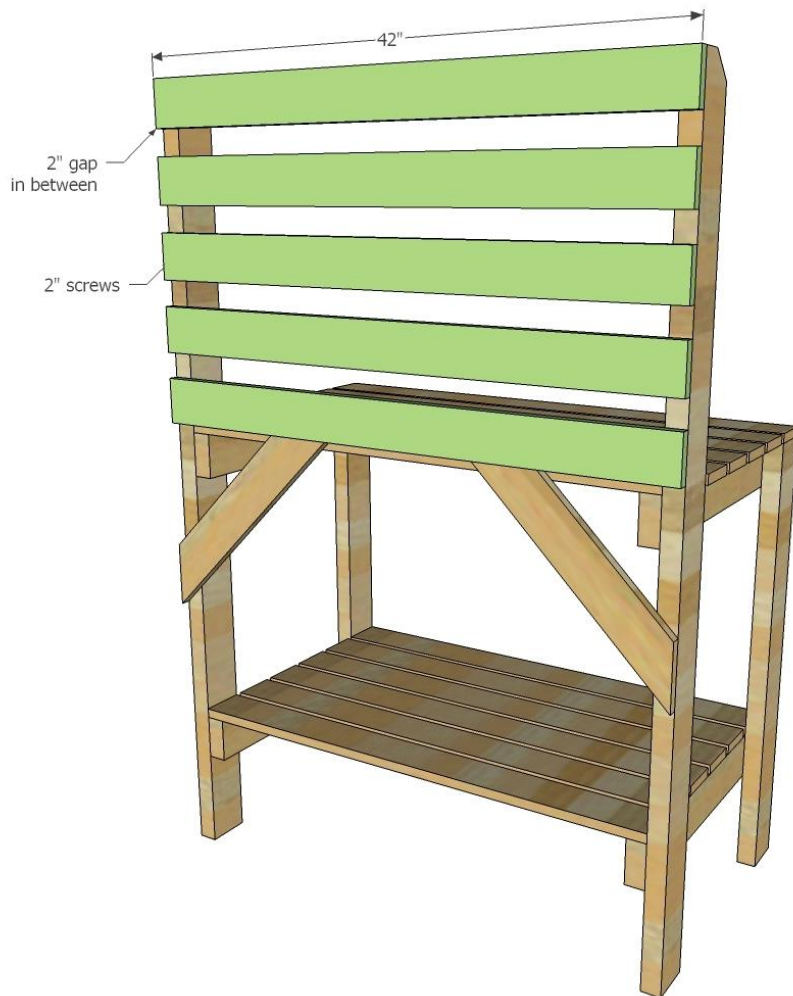

## STEP 6

Hutch Shelf – Screw through back boards and back legs into the hutch shelf board sides and back to attach with 2" exterior self-tapping screws.



### Finishing Instructions

Fill all holes with wood filler and let dry. Apply additional coats of wood filler as needed.

When wood filler is completely dry, sand the project in the direction of the wood grain with 120 grit sandpaper. Vacuum sanded project and work station to remove sanding residue. Wipe project clean with damp cloth.

Finish with paint, stain, polyurethane or other method you prefer.